

# Display Window for IKEA KALLAX

Three panels of 3 mm clear acrylic that assemble into one self-supporting window and slide into a single KALLAX cubby. Nothing is screwed or stuck to your furniture. Adult assembly, about ten minutes, a small cross-head screwdriver.



## In the box

- 1 square front panel, 3 mm clear acrylic
- 2 shaped side panels, 3 mm clear acrylic
- 4 stainless steel cube connectors
- 8 stainless steel screws
- 1 clear pull tab

Before you start, peel the protective film from both faces of every panel. Keep the small parts away from children and pets.

## Assembly and fitting

### 1 Lay out the panels

Place the three panels on a clean, soft surface. Put the square front panel between the two shaped side panels, holes lined up at the corners.

### 2 Fit the corner cubes

Sit a stainless steel cube inside each corner where a side panel meets the front panel. Each cube takes two screws, one from the front and one from the side.

### 3 Start every screw by hand

Turn each screw two or three turns by hand so the threads bite squarely. Do not drive any screw fully home yet.

### 4 Square it up and tighten

Check the window is square, then tighten the eight screws evenly, a little at a time. Stop when firm. Do not over tighten, acrylic can crack under force.

### 5 Slide it into the cubby

Hold the window by the sides and guide it straight into one clear KALLAX cubby until it sits fully and snugly against the frame.

### 6 Changing the display

Hook the clear pull tab under the front panel and draw the window forward. Refresh the display, then slide it back in.



#### Fit

Made for one standard IKEA KALLAX cubby. It needs the full width, height and usable depth of the cube, so it will not share an opening with a drawer, door, shelf or basket insert. Older or modified units: measure the clear opening first, or send us the measurements and we will confirm the fit.

#### Care

Clean with a soft, damp microfibre cloth. Never use glass cleaner, solvents or abrasive pads on acrylic. Keep away from direct heat.

#### Safety

Adult assembly. Small metal parts and screws, keep away from children and pets. Stop using the window if a panel or connector is damaged or loose. Do not let children climb the shelving or pull the window forward. Follow the furniture maker's wall anchoring guidance.